




Pallet Handling

Installation caution of Pallet Handling

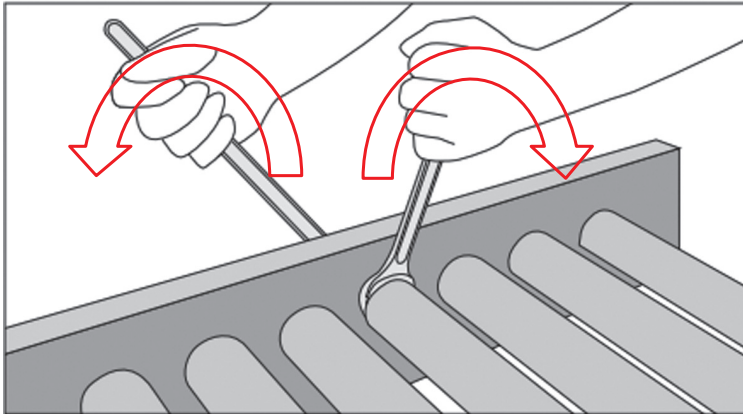

★Tighten the both inside and outside nut with a spanner at the torque of between 664 - 708 in·lbf

Warning

Tightening only one nut cannot fix the shaft properly.

Loosened shaft may spin in the frame hole and which causes the cable to be broken off.